

To remove the lock from the package:

1. Cut through the card back next to the arrow and pull back the plastic door.
2. The preset combination appears on the instruction sheet which is attached to the back of the lock; it is a series of 3 letters or numbers like the example below.

Card back



Cut here

Pull back



Combination & instructions

Instruction tag example



Preset combination example


HOW TO OPEN THE LOCK

1. THE FIRST TIME – Use the preset combination
2. Turn the dial right 3 times. Stop at the 1st number/letter.
3. Turn left 1 full turn, pass the 1st number/letter & stop at the 2nd number/letter.
4. Turn right & stop at the 3rd number/letter. Pull up on shackle.


HOW TO CHANGE THE COMBINATION

1. Decide on your new **3 letter/number** combination. Choose from the list below or create your own. A letter/number can be used more than once.
2. With the lock facing you, hold the reset tool so the Master logo is facing the side of the lock. Insert the reset tool firmly into the shackle hole until the collar of the reset tool touches the lock body.
3. Rotate the tool 90° in either direction until the Master logo on the reset tool is facing you.
4. To enter your new combination, turn the dial right at least 3 rotations to clear the current combination.
5. Turn right & stop at your 1st number/letter.
6. Turn left one full turn, pass your first number/letter & stop at your 2nd number/letter.
7. Turn right & stop at your 3rd number/letter.
8. Turn the reset tool back 90° & remove it from the lock.
9. Close the lock & record your combination in a safe place or store it at masterlockvault.com.
10. To reset the combination again, repeat steps 1-9.

Step 2

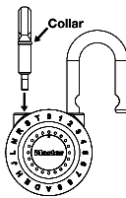

Step 3

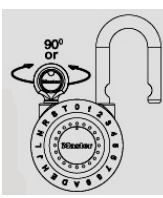

POSSIBLE COMBINATIONS

| Words | | | | | | | | | | | | | | | | | | |
|-------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| AD0 | A1D | A1L | A1R | ALE | AND | ANT | ARE | ASH | ATE | DAD | DEN | D1D | D1E | D1N | D0E | D0T | EAR | EAT |
| END | E0N | ERA | ETA | HAD | HAT | HEN | HER | H1D | H1S | H1T | H0E | H0N | H0T | 10N | 1RE | JAR | JET | J0T |
| LAD | LED | LE1 | LET | L1D | L1E | L1T | LOT | NET | N1L | N1T | N0D | N0R | N0T | OAR | OAT | ODE | O1L | OLD |
| ONE | ORE | RAD | RAH | RAN | RAT | RED | RID | RI0 | R0D | R0E | R0T | SAT | SEA | SET | SHE | S1N | S1R | |
| S1T | S0D | S0N | S0S | TAN | TAR | TEA | TEN | THE | TH0 | T1E | T1N | T0E | TON | T0T | | | | |
| Names | | | | | | | | | | | | | | | | | | |
| ADA | AJA | ALA | AL1 | AM1 | ANA | ANN | ARA | AR1 | ASA | ASH | DAN | DEE | DEL | DON | D0T | EDD | ELA | EL1 |
| HAL | IAN | 1DA | 11A | 1NA | 1RA | 1SA | JED | JOE | J01 | JON | LEA | LEE | LEN | LEO | LES | L1A | LON | NAN |
| NAT | NED | N1A | N0E | OLA | RAE | RAJ | RON | SAL | S1D | SOL | TAD | TA1 | TED | TEO | T1A | T0D | TRE | |

